8130 Series Setpoint Pressure Controllers


- » Precision pressure control for pressure sensitive processes
- » User-selectable response rate
- » Uses the proven advanced technology of popular mass flow controllers
- » Best performance and reliability in the industry
- » Available with elastomer seal



Features at a glance

- User-selectable response rate between 0.5 sec to 8.0 sec using a rotary switch
- Microprocessor-controlled PID loop to meet desired response rate
- Highly versatile device that can control pressures from 1 torr to 100 torr in most chamber volumes
- Can be used with pressure transducer, capacitance manometer, thermocouple (not provided, supplied by user)
- Measures the flow rate with $\pm 1.0\%$ accuracy with a 0.15% repeatability, making the flow rate an indication of process repeatability
- The solenoid proportional valve is designed with a 1:1000 turn down ratio for fast response. It has fewer parts to enhance speed responsiveness and long term reliability.
- · Zero-drift of <0.6% per year
- All performance tested per SEMI test methods



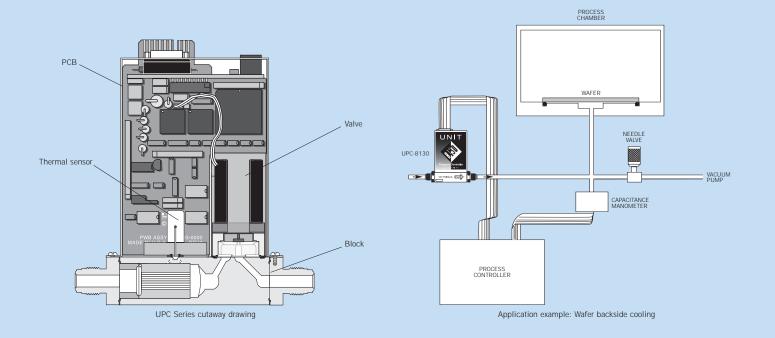

Description

The 8130 Series pressure controllers are typically used to control the flow of gas needed to maintain an input setpoint pressure into a chamber. The UPC is an integrated compact device composed of a solenoid proportional valve, a flow meter and the control electronics.

The 8130 reads the output of an external pressure measurement device (not included) and compares it to the desired setpoint. The control valve is either opened or closed as necessary to bring the pressure to the desired level. The pressure setpoint may be programmed to a fixed level, rapidly stepped to different levels, or varied continuously as determined by the setpoint programming.

The valve provides proportional control of gas flow to achieve the required response rate to the desired pressure setpoint. Response is critical to the true performance of a pressure controller and depends on pump size, chamber size and components locations. Response determines the controller's ability to react to changes in pressure due to flow variations, temperature shifts, chemical reactions, pressure regulator fluctuations and volume changes.

The precision electromagnetic control valve has a wide dynamic range that provides superior precision and control. It has been subjected to over 8 million cycles with no degradation in performance.

The flow meter provides a direct measurement of the gas flow rate with a sensor that uses the thermal properties of gases. Since the thermal mass flow measurement is mostly independent of pressure and temperature, this method provides a stable measurement with changing process conditions.

The patented IsoSensor™ is a high stability sensor that produces ultra-low drift, reducing the need for frequent recalibration. It also eliminates thermal siphoning effects.

Model description

8130 Analog control Analog interface

CrossChek[™] metrology system



Celerity's world-class CrossChek calibration methodology maintains SPC-verified crossChek™ calibration accuracy with ±3 sigma limit

(99.7% confidence level) compared to ±1 or 2 sigma limits (67% to 95% confidence level) for other manufacturers.

CrossChek calibration methodology provides ongoing verification of production calibration standards. This ensures consistent and repeatable accuracy performance within ±3 sigma of published specifications. No other flow control company offers the same guarantee.

Warranty

- · Model 8130 2 years
- · Extended warranty option available

8130 Series Pressure Controllers

Performance (pressure control)

Response 0.5 to 8 sec, user-selectable with a manual 8-position

rotary switch

Performance (flow meter output)

Accuracy ±1% full scale (±30 per SEMI E56-96) Repeatability ±0.15% full scale (per SEMI E56-96) ±0.9% (full scale/cal. gas) (per SEMI E27-92) Linearity

Inlet pressure coefficient 0.0025% full scale/psi (N2) Ambient temp. coef. Zero: 0.05% full scale/°C Span: 0.05% full scale/°C Leak integrity 1 X 10⁻⁹ atm-cc/sec (He) Zero drift < 0.6% per year

Specifications

Gases He, N₂, Ar

Standard flow range 10 sccm to 30 slm (He equivalent)

Flow measurement range 2-100% (full scale) Pressure control range 1 to 100 torr ≤ 1% full scale Valve leak rate Ambient temperature range 0-50°C (32-122°F) Max. operating pressure 2.45 kg/cm² (35 psi) Max. overrange pressure 35 kg/cm² (500 psi) Proof pressure 105 kg/cm² (1500 psi)

7 to 50 psid Pressure differential range 30 minutes Warm-up period Mounting position HOV

Valve Normally closed

Electrical characteristics

Pressure transducer input

Input/Output signal

Output monitor

Setpoint input 100 mV to 10 VDC or 5 Vde standard corresponding to the

range of the external pressure transducer 0-10 VDC or 0-5 VDC proportional to pressure 0-5 VDC linearly proportional to required flow rate

Valve off External: TTL signal

Auto shut-off Setpoint < 0.9% full scale commands off;

standard; no disable option

Power input +15 VDC (140 mA max.), -15 VDC (190 mA max.)

Power consumption 5 watts

Mating connector 20 contact cardedge

Mechanical characteristics

Surface finish 32µ inch Ra Fittings 1/4" VCR®

Materials

316L SS/K-M45/304 Wetted components

Valve position

1.4 Kg (3.08 lbs.) Weight

Calibration references

Traceability National Institute of Standards and Technology (N.I.S.T.)

Standard temperature


0°C and vacuum exhaust and pressure


Specifications and features are subject to change without notice.

All specifications reflect nitrogen calibration using Molbloc/Molbox™ transfer standards.

Calibration by primary standards and surrogate gases is available as an additional charge option.

CrossChek™ calibration methodology maintains SPC-verified calibration accuracy with ±30 limit (99.7% confidence level).

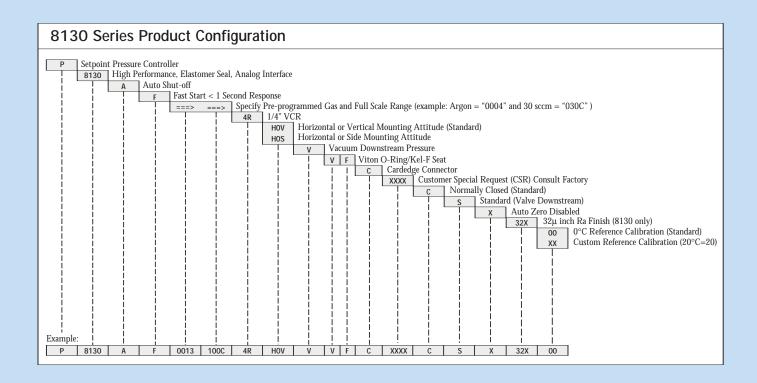

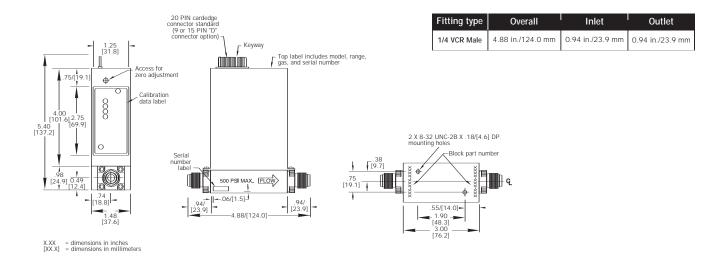



UNII

2/05

CELERITY, INC. 22600 Savi Ranch Parkway Yorba Linda, California 92887 Telephone 714.279.3500 Facsimile 714.921.0804 www.celerity.net



For technical assistance, contact Celerity Applications Engineering at 714.279.3500.

Celerity, Unit, MultiFlo, IsoSensor, and CrossChek are trademarks of Celerity, Inc. All other product or service names mentioned in this document may be trademarks of the companies with which they are associated. System descriptions are typical and subject to change without notice.